 
Nonhazardous (Unclassified) Class I, Division 2, Groups A, B, C, D or Class I, Zone 2, Group IIC Hazardous (Classified) Locations



Non I.S. terminals X1



The Digital Output Module Relay Type 9477/15-08-12 is designed to receive a digital signal from the IS1 CPU & Power Module to control up to eight Non-I.S. circuits by means of relay contacts.

The modules is an associated apparatus for use in Nonhazardous (Unclassified), Class I, Division 2, Group A-D or Class I, Zone 2, Group IIC Hazardous (Classified) Locations according to NEC Article 504/505 or Canadian Electrical Code, CSA C22.

The internal system circuits are safely galvanically isolated from all output circuits up to a peak voltage of 375 V.

Type 9477/15-08-12 Relay circuits may not exceed the following nominal values:

Un	250 V AC	30 V DC	110 V DC	220 V DC
l _n	2 A	2 A	0.3 A	0.12 A
Pn	100 VA	-	-	-

The output circuits are safely galvanically isolated from earth and from each other up to an operating voltage of 253 V.

Connection allocation (X1)

Output	Terminal	
0	1, 2	
1	3, 4 5, 6	
1 2 3	5, 6	
3	7, 8	
4 5	9, 10	
5	11, 12	
6	13, 14	
7	13, 14 15, 16	

Notes:

- Suitable separation must be maintained between circuits connected to nonincendive circuits or AEx/Ex nA circuits and the I.S. input circuits of other I/O modules of the IS1 resp. IS1+ system. Use partition (SAP No. 162740 or 220101) for separation from I/O modules with I.S. circuits. Do not carry out work at the terminals without the partition plate in place.
- Do not disconnect nonincendive circuits or AEx/Ex nA circuits at X1 unless area is known to be non-hazardous. Mechanically secure the terminal blocks with the screws provided, to prevent from being detached unintentionally.
- 3. Electrical Apparatus connected to an intrinsically safe system must not use or generate voltages > 253 V (U_{max}).
- Only use BusRail extension Type 9494/L1-V* fitted aside the module. Do not mount the module fitted aside BusRail Begin or BusRail Begin types 9494/A2-B0 or 9494/A2-E0.
- For Installation in Division 2 or Zone 2 see Certification drawing for IS1 resp. IS1+ Remote I/O System No. 9400 6 031 004 1 or 9400 6 031 006 1 as part of the documentation of the CPU & Power Modules.

WARNING:	Do not disconnect equipment when a flammable or combustable atmosphere is present.
AVERTISSEMENT:	Ne pas débrancher l'équipement en présence d'atmosphère inflammable ou combustible

				00.12.	_{Name} Bagusch	Certification drawing Digital Output Module Relay	scale none
			Checked		Kaiser	Type 9477/15-08-12	^{Sheet} 1 of 1
01	03.05.2018	Bagusch			STAHL	9477 6 031 002 1	Agency FM
Version	Date	Name]			Rep. f. Rep. t.	A4

F 4830 503