



pac-Bus Type 9194/31-cd  
cd = numeral 17 or 22 for grid size

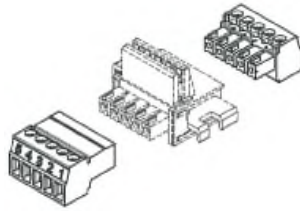


Terminal set Type 9194/50-01

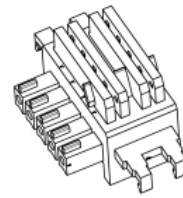

pac-Bus Type 9294/31-12

Types 9194 and 9294 are nonincendive apparatus for installation in Non-Hazardous, Class I, Division 2 or Zone 2, Hazardous (Classified) Locations.

Type 9195/\*\*\*\_\*\*\_\*\*\*\*

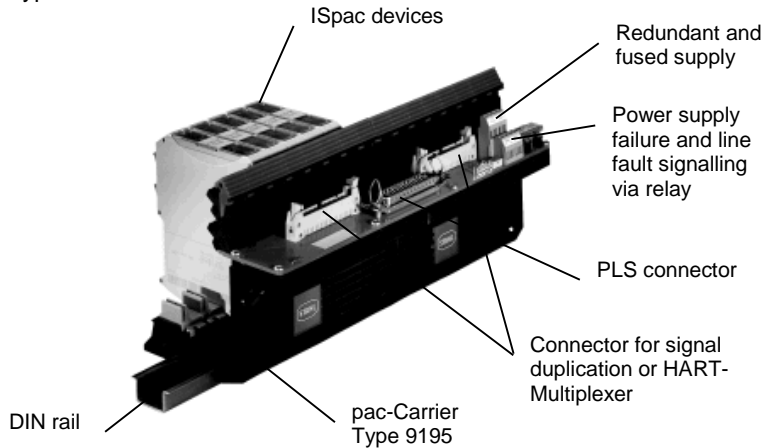

The pac-Carrier Type 9195 is a nonincendive apparatus for installation in Non-Hazardous, Class I, Division 2 or Zone 2, Hazardous (Classified) Locations.

pac-Carrier Type 9195/abc-def-ghij

- ab = numeral 08, 16 or 24 for slots, alternatively a = numeral 1 to 9 for slots and b = numeral 1 or 2 for used channels per slot
- c = letter A, H, M, N, P, S or T for model
- de = letters for manufacturer of automation system
- f = numeral for type of automation system
- gh = numeral for I/O-module
- ij = letter plus numeral for system-specific connector for process control system

Notes:

1. Installation should be in accordance with Article 504/505 of the National Electrical Code, ANSI/NFPA 70 and ANSI/ISA RP 12.06.01.
2. Installation in Canada should be in accordance with the Canadian Electrical Code, CSA C22.1, Part 1, Appendix F.
3. Use a general purpose enclosure meeting the requirements of IEC 61010-1 for use in Non-Hazardous or Class I, Division 2, Hazardous (Classified) Locations.
4. Use an FM Approved Dust-ignition proof enclosure appropriate for environmental protection in Class II, Division 1, Groups E, F and G; and Class III, Hazardous (Classified) Locations.
5. These devices are to be mounted on DIN rail.
6. Ambient temperature: -20°C ... +70°C (any mounting position; pay attention on the I.S. isolator's specifications)
7. Ambient temperature: -40°C ... +70°C for types 9194 and 9294

WARNING: Do not disconnect equipment when a flammable or combustable atmosphere is present.  
 AVERTISSEMENT: Ne pas débrancher l'équipement en présence d'atmosphère inflammable ou combustible.

The safety relevant statements of this document may be transferred into the operating instructions. Transferring the text, editorial changes of equivalent meaning are allowed.

|         |          |         |         |        |            |   |                 |
|---------|----------|---------|---------|--------|------------|---|-----------------|
|         |          |         | 2007    | Date   | Name       | Certification drawing<br>pac-Bus, Type 9194/31-** and 9294/31-12<br>Terminal set, Type 9194/50-01<br>pac-Carrier, Type 9195/***_**_**** | Scale           |
|         |          |         | drawn   | 04.05. | Einsiedler |   | none            |
|         |          |         | checked |        | Kaiser     |   | Sheet<br>1 of 1 |
| 03      | 29.08.22 | Reistle |         |        |            | 91 956 01 31 1  | Agency          |
| 02      | 15.10.12 | Reistle |         |        |            |   | FM              |
| 01      | 24.08.11 | Reistle |         |        |            |   |                 |
| Version | Date     | Name    | Ers. f. |        |            | Ers. d.   | A4              |