


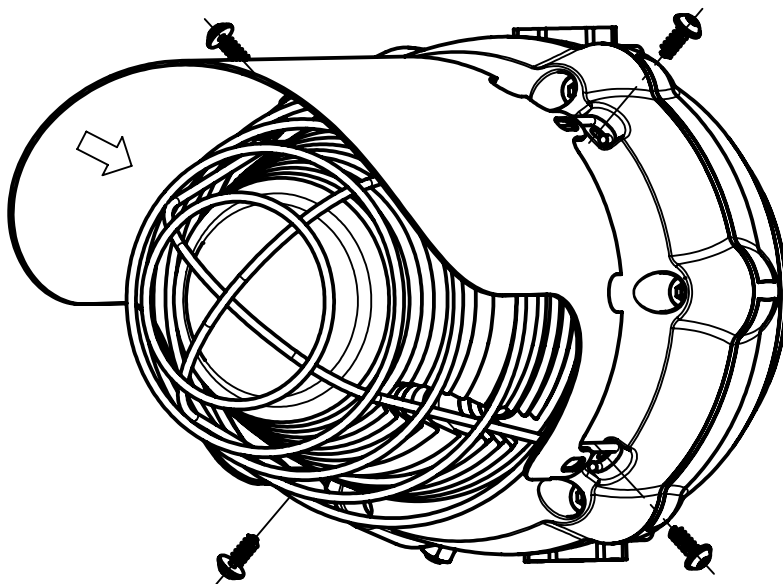

Vor Montage bitte Schutzfolie von der Sonnenblende entfernen.

Zur Montage der Sonnenblende bitte vorhandene Schrauben verwenden.

Drehmoment PT-Schrauben: 0,5 Nm

Before assembly please remove the protective foil from the Sun Shield.

To assembly the Sun Shield please use the existing screws.
torques PT-Screws: 0,5 Nm

Veuillez retirer le film de protection du pare-soleil avant le montage.

Pour le montage du pare-soleil, utiliser les vis existantes.
Couple des vis PT : 0,5 Nm



HQ: R. STAHL
Schaltgeräte GmbH
D-74638 Waldenburg
www.stahl-ex.com
Made in Germany

