
Types 9275/10-2*-**-11*

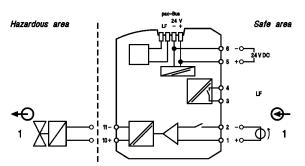

HAZARDOUS AREA: SAFE AREA:

Class I, II, III, Division 1, Groups A-G & Class I, Zone 0, 1, 2, Groups IIC, IIB, IIA Class I, Division 2, Groups A-D & Class I, Zone 2, Groups IIC, IIB, IIA & Non-hazardous

Type 9275/10-c-d-11* with

c = 21 or 24 (number for open-circuit voltage) d = 25 or 48 (number for current limitation) * = s or k (design of terminals)

Non- I.S. signal circuits: Power supply circuits:

Terminal No.: 1, 2, 3, 4 Terminal No.: 5, 6 or pac-Bus $U_N = 24 V (19.2 \dots 30 V DC)$

Entity parameters for I.S. circuits:

Type and	Voc / Uo	lsc / lo	Po	Ci	1:	GP A,B or IIC		GP C or IIB		GP D or IIA	
Terminal	[Vdc]	[mA]	[mW]	[nF]	[mH]	Ca / Co [nF]	La / Lo [mH]	Ca / Co [nF]	La / Lo [mH]	Ca / Co [nF]	La / Lo [mH]
9275/10-21-25-11* No. 10, 11	23.98	37.4	224	11	negligible	110	22	910	100	3330	200
9275/10-24-48-11* No. 10, 11	27.06	91.11	616	11	negligible	78	3.5	686	15	2290	32

The Entity Concept allows interconnection of intrinsically safe apparatus with associated apparatus not specifically examined in combination 1. as a system. Selected Intrinsically Safe Equipment must be third party listed as intrinsically safe for the application and have intrinsically safe entity parameters conforming with the following:

 V_{max} (or Ui) \geq Voc or Vt (or Uo)

- Ci + C _{cable} ≤ Ca (or Co) I_{max} (or li) \geq lsc or lt (or lo) Li + L_{cable} ≤ La (or Lo)
- P_{max} (or Pi) \geq Po

It should be noted, however, for installation in which both the Ci and Li of the intrinsically safe equipment exceed 1% of the Ca (or Co) and La (or Lo) parameters of the associated apparatus (excluding the cable), only 50% of Ca (or Co) and La (or Lo) parameters are applicable and shall not be exceeded.

- 2. Capacitance and inductance of the field wiring from the intrinsically safe equipment to the associated apparatus shall be calculated and must be included in the system calculations as shown under 1. Where the cable capacitance and inductance per foot are not known, the following values shall be used: $C_{cable} = 60 \text{ pF} / \text{ft.}, L_{cable} = 0.2 \mu\text{H} / \text{ft.}$
- The output current of this associated apparatus is limited by a resistor such that the output voltage-current plot is a straight line drawn 3. between open-circuit voltage and short-circuit current.
- 4. This associated apparatus has not been evaluated for use in combination with another associated apparatus.
- This associated apparatus may also be connected to simple apparatus as defined in Article 504.2 and installed and temperature classified 5. in accordance with Article 504.10(B) of the National Electrical Code (ANSI/NFPA70), or other local codes applicable.
- 6. Associated apparatus must be installed in an enclosure (which meets the requirements of ANSI/ISA S82) suitable for the application in accordance with the National Electrical Code (ANSI/NFPA 70) for installation in the United States, the Canadian Electrical Code for installation in Canada, or other local codes, as applicable.
- When using as non-incendive device for Class I, Division 2 or Class I, Zone 2 do not snap equipment onto or off the pac-Bus 9294, or 7. connect and disconnect non-intrinsically safe-lines unless power has been removed or the area is known to be non hazardous.
- Intrinsically safe circuits must be wired separately in according with Article 504.20 of the National Electrical Code (ANSI/NFPA 70) for 8. installation in the United States, the Canadian Electrical Code Part 1, Appendix F for installation in Canada, or other local codes, as applicable.
- 9. When multiple circuits extend from the same piece of associated apparatus, they must be installed in separate cables or in one cable having suitable insulation. Refer to Article 504.30(B) of the National Electrical Code (ANSI/NFPA 70) and Instrument Society of America Recommended Practice ISA RP12.6 for installing intrinsically safe equipment.
- Electrical apparatus connected to an intrinsically safe system shall not use or generate voltages > 253 V AC resp. > 125 V DC. (Umax) 10. Ambient temperature: -20°C ... +60°C (any mounting position) 11.

WARNING - EXPLOSION HAZARD

Substitution of components may impair suitability for Class I, Division 2 or Class I, Zone 2.

Do not disconnect equipment unless power has been removed or the area is known to be non-hazardous.

AVERTISSEMENT - RISQUE D'EXPLOSION

Le remplacement des composants peut remettre en cause la compatibilité avec la classe I, division 2 oú classe I, zone 2. Ne déconnecter l'appareil que s'il est hors tension ou si l'atmosphère est exempte de concentrations inflammables.

			2017 Drawn by	Date 19.06 .	_{Name} Reistle	Certification drawing	Scale none
			Checked	10.00.	Kaiser	Digital Output Type 9275	Sheet
						Туре 9275	1 of 1
01	05.08.20	Reistle	-		STAHL	9275 6 031 001 3	UL
Version	Date	Name				Rep. f. Rep. t.	A4

The copying, distribution and utilization of this document as well as the communication of ist contracts to others without expressed authorization is prohibited. Offenders will be held liable for the payment of damages. All rights reserved in the event of the grant of a patent, utility model or ormanetial design registration.